

# PD4-6600 Loop Leader+ Loop-Powered Process Meters

## Data Sheet



PD4-6603/7  
Feet & Inches Display



PD4-6604/8  
Decimal Display

**Loop Leader+**  
Series



All models



IECEx

PD4-6607/8 only

- Large Display NEMA 4X, IP65 Loop-Powered Wall & Pipe Mounted Meters
- 4-20 mA Input Displayed with  $\pm 0.02\%$  FS Accuracy
- 2.1 Volt Drop Maximum
- 2.8" (71 mm) 5 Alphanumeric 14-Segment Characters Top Display (PD4-6604/8)
- 2.8" (71 mm) 5 Digits 7-Segment, FT-IN & Fractions Top Display (PD4-6603/7)
- 1.5" (39 mm) 8 Alphanumeric 14-Segment Characters Bottom Display
- Displays Level in Feet & Inches up to 999 Feet, 11 & 15/16 Inches (PD4-6603/7)
- 20-Segment Bargraph with Numeric Percent Indication
- (2) Open Collector Outputs Standard; Assignable to Pulse, Alarm, Timer, or Stopwatch
- (2) Optional Loop-Powered Solid-State Relays; Assignable to Alarm, Control, Timer, or Stopwatch
- Stopwatch & Timer Functions to Drive Relays & Open Collectors
- Optional Isolated 4-20 mA Analog Output
- Relay Pump Alternation Based on Level and Runtime
- Display Relay Runtime & Cycle Count via Relay Info Menu
- Round Horizontal Tank Function; Just Enter Diameter & Length
- 32-Point Linearization, Square Root Extraction and Programmable Exponent Function
- Free PC-Based MeterView XL USB Programming Software
- Externally DC Powered Backlight with Red Backlight for Alarm Conditions
- Safe Area Operating Temperature Range:  $-40$  to  $75^{\circ}\text{C}$  ( $-40$  to  $167^{\circ}\text{F}$ )
- Conformal Coated PCBs for Dust & Humidity Protection
- ATEX and IECEx Certified as Intrinsically Safe (PD4-6607/8 Only)
- Pipe Mounting Kit Available
- 3-Year Warranty

Watch the Loop-Powered  
Meters Video



Click or scan

**VIDEO**



**The Most Comprehensive Line of Loop-Powered Indicators on the Market**

Precision Digital is broadening its line of loop-powered indicators to include three new product lines:

- PD6900 ProtEX+ Explosion-Proof Meters
- PD6900 VantageView+ General Purpose Field-Mount Meters
- PD4 Loop Leader+ Large Display Field-Mount Loop-Powered Meters

Learn all about these new series and see why Precision Digital now has the most complete line of loop-powered meters on the market!



Watch the Loop-Powered Meters Video  
*Click or scan*

**TABLE OF CONTENTS**

OVERVIEW . . . . . 3

DISPLAY FEATURES . . . . . 4

OUTPUTS . . . . . 8

PUMP CONTROL . . . . . 9

INPUT SIGNAL CONDITIONING . . . . . 11

PHYSICAL FEATURES . . . . . 12

OPERATIONAL FEATURES . . . . . 13

METERVIEW XL PROGRAMMING SOFTWARE . . . . . 15

ACCESSORIES . . . . . 17

LIGHT / HORN & BUTTON ACCESSORY . . . . . 19

DIMENSIONS . . . . . 22

CONNECTIONS . . . . . 23

WIRING DIAGRAMS . . . . . 24

SPECIFICATIONS . . . . . 25


ORDERING INFORMATION . . . . . 28

**WHY USE LOOP-POWERED METERS?**

The most basic decision a user wishing to display a 4-20 mA signal on a digital display has to make is: should the meter be powered by line voltage or should it be powered by the 4-20 mA loop? The meters in this data sheet are powered by the 4-20 mA loop. The three main benefits of this are:

- No additional power required
- Easy wiring
- Additional digital displays can easily be added in the same loop

The diagram on the right illustrates how a loop-powered meter is wired. Notice there are only two connections made to the meter.

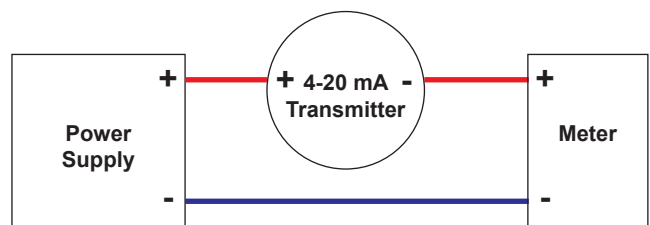

For more information on loop-powered meters, check out these white papers:

[Fundamentals of Loop-Powered Devices](#)

[Loop-Powered vs Line-Powered Meters](#)

OVERVIEW

Front



PD4-6603/7 Feet & Inches Display

- Feet & inches on top line
- 8-Digit alphanumeric bottom line
- 20-Segment bargraph with numeric percentage




PD4-6604/8 Decimal Display

- 5-Digit alphanumeric top line
- 8-Digit alphanumeric bottom line
- 20-Segment bargraph with numeric percentage

Connections

- (2) Open Collector Outputs Standard (150 mA max); Assignable to Pulse, Alarm, Timer, or Stopwatch
- Digital Input for Remote Operation of a Single Task
- Remote Contacts for Remote Operation of All Four Programming / Operation Buttons Using Control Station [PDA2364-MRUE](#)
- (2) Optional Loop-Powered Solid-State Relays; Assignable to Alarm, Control, Timer, or Stopwatch
- Optional Isolated 4-20 mA Analog Output

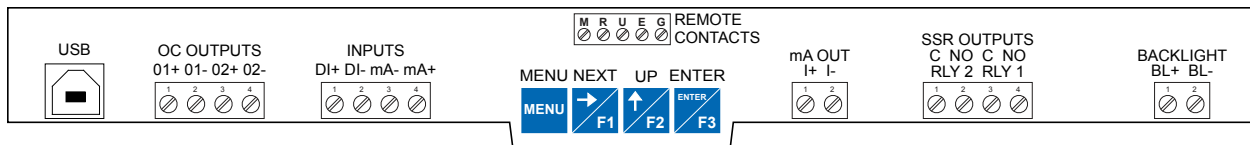

Connections for -L5N Option

Loop-Powered Indicators with Advanced Display and Control Features

The Loop Leader+ loop-powered large display meters can be installed virtually anywhere to provide convenient and informative display of any 4-20 mA signal. One of the most convenient features of these instruments is their large, dual line display. The 2.8" 5-digit top display is used to display the process variable while the 1.5" 8-character alphanumeric bottom display can be used to display the units of measure or a tag. Feet and inches models display level in feet and inches on the top display while the 8-digit alphanumeric bottom line may be used to display a tag or custom message.

Further enhancing the display on these instruments is a 20-segment bargraph that also includes a numeric value of the percentage the bargraph represents.

Free, PC-based, MeterView XL software that connects to the meter via a micro USB cable is available for programming and setup of the meters.

The PD4 is available in two configurations: Display only and with two solid-state relays and 4-20 mA analog output. All models come equipped with two open collector outputs and remote contacts. The open collector outputs are useful for alarm indication. The remote contacts can be used to remotely operate the four programming buttons, to acknowledge the relays, to start/stop a timer/stopwatch, and more. The relays can be programmed for alarm indication, on/off control, or pump alternation.

Finally, there are intrinsically safe versions of these instruments that can be installed in hazardous areas.

**DISPLAY FEATURES**

**PD4-6603/7 Feet & Inches Level Meter with Bargraph**




14-Segment Characters on Bottom Display Provide Clearer Readings of Units or Tags

- 1. Available on safe area models only. Requires external 24 VDC power.
- 2. Backlight requires external 24 VDC power.



**PD4-6604/8 Process Meter with Decimal Display & Bargraph**

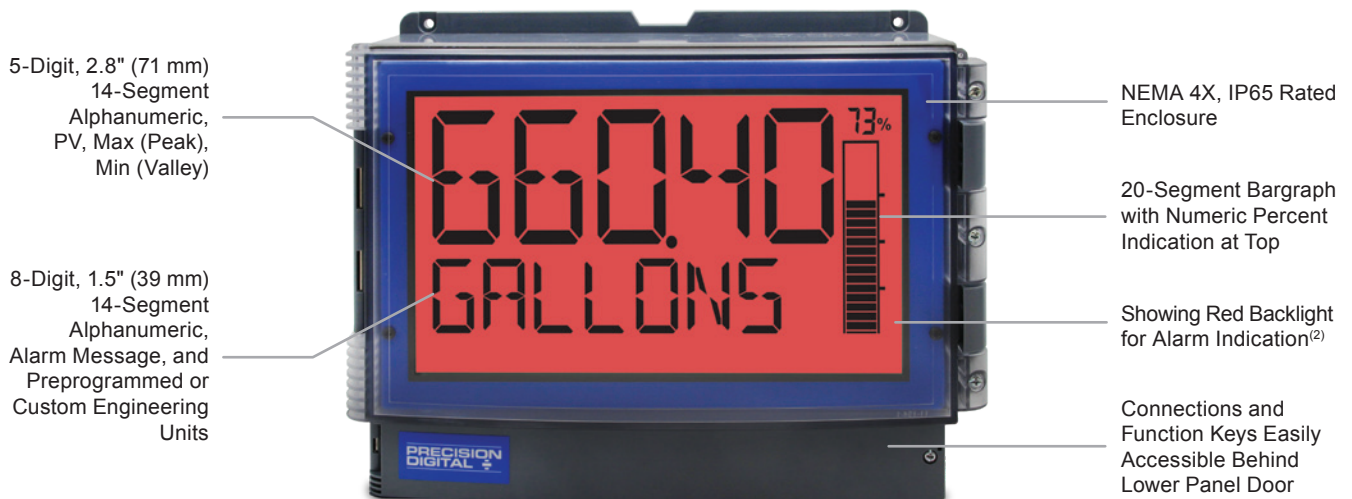


14-Segment Characters on Bottom Display Provide Clearer Readings of Units or Tags

- 2. Backlight requires external 24 VDC power.



### Large Informative Display

One of the most convenient features of the PD4 Loop Leader+ Series is its large, dual line display. With a whopping digit height of 2.8" (71 mm) on the top display, the Loop Leader+ has the largest digits for any loop-powered meter on the market! Even the 1.5" (39 mm) 8-character alphanumeric bottom display is bigger than most loop-powered large displays on the market. Plus, the 20-segment bargraph with percentage indication on top makes reading and understanding process values easier than ever. Predefined display units give users even more display flexibility, and the high contrast 24 VDC externally powered backlit LCD display is readable from far away and under various lighting conditions.

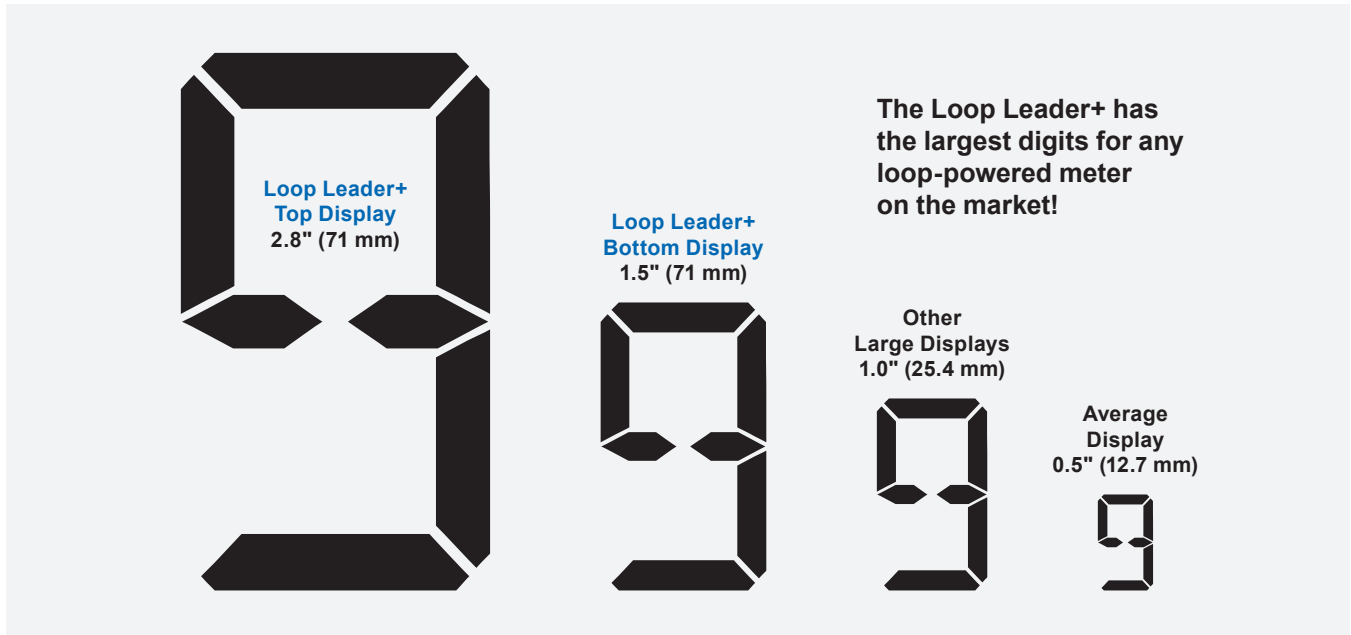

### Commas Make it Easy to Read Big Numbers

The bottom display is set to show a comma separating the thousands and millions place by default if a numeric value is being displayed. This feature can be disabled or enabled using the *Comma* menu.



### Red, Flashing Display Gets People's Attention When Alarms Occur

When an alarm occurs, the display can be programmed to turn red and flash. In addition, a unique custom alarm message for each of the two relays and two open collectors can be displayed on the bottom display. These features can be activated even if no relay or open collector is connected.

Showing Red Backlight for Alarm Indication      Programmable Flashing Display



Toggle Between Units & Custom Alarm Message



### Dual-Line Display with PV/Units/Tag/ Bargraph

One of the most common configurations of these instruments is displaying the process variable on the top line and units and a tag toggling on the bottom line with a bargraph for additional clarity.



PV on the top line, units and tag toggling on the bottom line

The PD4's 20-segment bargraph helps users get a quick understanding of where their process is at. This bargraph also includes a numeric value of the percentage the bargraph represents.

### 14-Segment Characters

Notice how much better letters like "T", "N" and "K" appear as 14-segment characters on the bottom display vs. 7-segment characters found on other meters.



7-Segment

14-Segment

### Dual-Scale Display Feature

Users can use the Loop Leader+ dual-scale feature when they want to show the same input in two different scales. For instance, the following example shows an application where the Loop Leader+ displays the input in feet and gallons.

#### Display Feet & Gallons and Toggle Between Units



Feet Value on Top  
Gallons Value on Bottom

Height Units on Top  
Volume Units on Bottom

### Backlight Turns Red on Alarm

The externally DC powered backlight is standard on all Loop Leader+ meters. It provides optimum visibility in any lighting condition and it can be programmed to turn red for alarm conditions. The backlight may be enabled or disabled using the *Backlight* menu. The backlight is enabled by default (input must be wired appropriately for the backlight to function). The backlight must be powered by an external power source.




Backlight for Visibility in Any Lighting Condition and Red Backlight for Alarm Indication

### Feet & Inches Display with Bargraph

There are Loop Leader+ models available for users that prefer to see their level displayed in feet & inches instead of decimal format. These versions can display level to 999FT 11IN & 15/16 on the top line. The bottom line can toggle between a tag and units or if dual scale mode is used, can display the input in a different scale such as volume.



Level in Feet & Inches with Tag and Bargraph

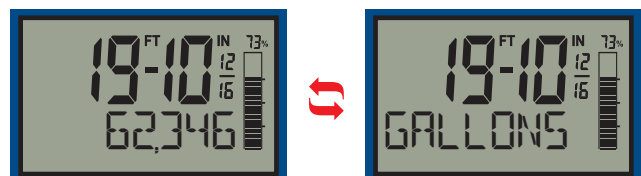

Same Meter with Bottom Line Toggling Between Tag, Volume (62,346), and Units (Gallons)


### Max/Min Display

The max & min readings (peak & valley) reached by the process can be displayed either continuously or momentarily.

- Display momentarily by pressing the F1 function key (default) or assigning to any of the other function keys or to the digital input in the User menu. Press Enter to lock/unlock max/min display.
- Display continuously by assigning either display line to max/min through the Display menu.

Any of the F1-F3 function keys (buttons) and the digital input can be programmed to reset the max & min readings.

**Top Display:** Process Value  
**Bottom Display:** Max & Min

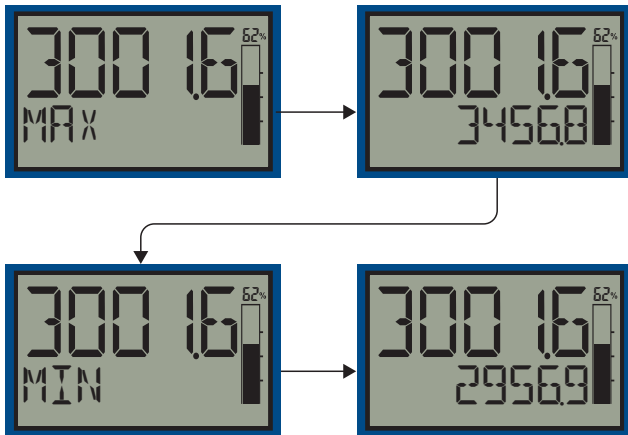

### Bargraph Provides Quick Understanding

The 20-segment bargraph helps users get a quick understanding of where their process is at. This bargraph also includes a numeric value of the percentage the bargraph represents. The bargraph can be programmed to represent the percent of PV1 or PV2 or it can be scaled to any range within the scale.




Bargraph indicating a 200 gallon tank is just about full

### Predefined and Custom Units

The meter has six available preprogrammed unit classes, volume, height, temperature, pressure, weight, and rate. When the desired unit class or unit of measure within a class is not available, a custom unit may be programmed by using the (CUSTOM) menu.

### Change Between Units without Needing to Re-Scale the Meter

It is possible to change the display units within the selected unit class without the need to re-scale the meter. When selecting a new unit from within the DISPLAY menu (e.g. changing from gallons (GAL) to liters (L)), the meter will automatically convert the display values to display the new unit. If entering a custom unit (CUSTOM), a custom conversion factor will need to be entered.

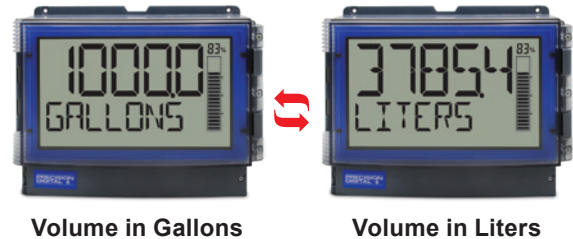


Volume in Gallons

Volume in Liters


### Tare

 The tare function zeroes out the display. In the case of scale weight, tare is used to eliminate container weight and provide net weight readings. The captured tare may be reset manually with any function key or digital input.



## OUTPUTS

Loop Leader+ meters come with two open collector outputs as standard and two solid-state relays and 4-20 mA output as options. The open collector outputs and relays generally operate in the same manner, with the major exception being the open collectors are not available for pump alternation and the relays are not available with pulse features. The open collectors and relays can be controlled either automatically or manually. The alarm status (with a unique flashing red message for each of the two relays and open collectors) will show on the display even with no output wired.

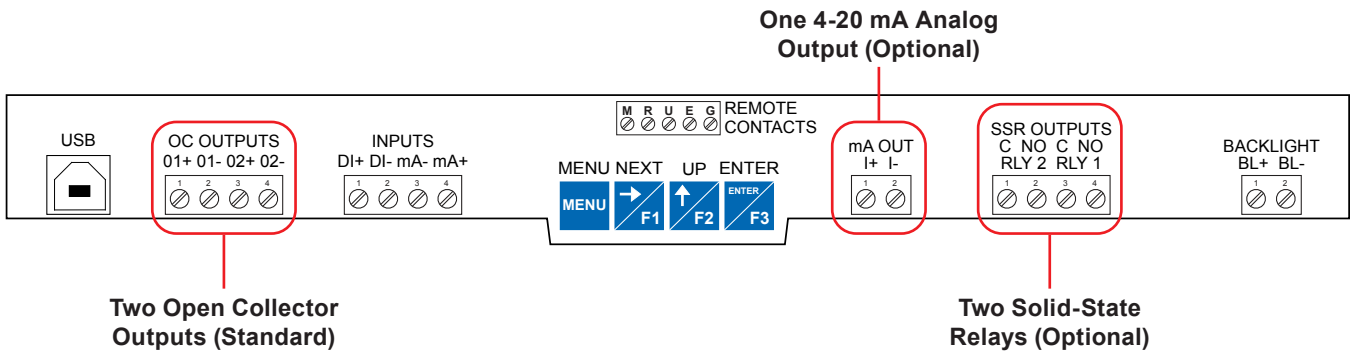

### Two Open Collector Outputs

The meter is equipped with two NPN open collector outputs that may be set up for pulse outputs, alarms, timed pulses, stopwatch on/off, or disabled. Pulse outputs can be set to transmit the PV value (PV1 or PV2 if meter is in dual-scale mode). Output 2 may be used to generate a quadrature output based on the other open collector output. An output test mode is also selectable to generate pulses at a constant programmable frequency.

### Two Optional Solid-State Relays

The meter is optionally equipped with two solid-state relays that may be set up for alarms, timer, stopwatch on/off, or pump alternation. The relays are rated at 250 VAC/DC @ 1 A for resistive loads and 75 VA @ 0.6 A, 250 VAC/DC max (Safe Area only) for inductive loads. Alarms are available based on the PV value or the digital input.

### Optional Isolated 4-20 mA Output

The isolated analog output signal can be configured to represent the process variable (PV1, PV2, or retransmit). While the output is nominally 4-20 mA, the signal will accurately accommodate under- and over-ranges from 1 to 23 mA. The output can be reverse scaled such that the meter's high calibration value outputs 4 mA and the meter's low calibration outputs 20 mA.

### Loop-Powered Relay Alarm Trip for General Purpose & Hazardous Areas

The two solid-state relays can be used as a loop-powered relay alarm trip in both general purpose and hazardous areas. The PD4's two relays can be programmed for two different kinds of latching operation: Reset via momentary contact closure at any time or reset via momentary contact closure only after the alarm has cleared. And the meter's display can be programmed to turn red and flash a unique custom alarm message for each relay – something not found on most loop-powered alarm trips.



## Resetting the Open Collectors and Relays

The open collectors and relays (alarms) may be programmed to reset in the following ways:

- **Automatic (R[UN]T[O]M[AN]):** Alarm will reset automatically once the alarm condition has cleared.
- **Automatic/Manual (R[UN]T[O]M[AN]):** Alarm will reset automatically once the alarm condition has cleared but can also be reset using the Enter button (or whichever function key is set to acknowledge) at any time.
- **Latching (L[ATCH]):** Alarm must be reset manually and can be done so at any time. Press the Enter (ACK) button at any time to clear the alarm.
- **Latching with Reset after Cleared (L[ATCH] CLEAR):** Alarm must be reset manually and can only be done so after the alarm condition has cleared. Press the Enter (ACK) button after the alarm condition has cleared to reset the alarm.


## Timer Function

Timers are used in everyday life; one of the most common examples is the microwave oven. Industrial timers are used in process control applications where certain events or actions need to be controlled by time. Examples include automatic batch control applications, where the relay needs to be energized for a specific length of time.

The timer function is available on the open collector and relay outputs; which means that you can have up to four timers per meter. The start and stop actions can be triggered from the setup menu or by the function keys and digital input. The meter can be setup to display the off/on timer count down.

There are two modes of operation:

- **Continuous Timer (Interval)**  
At the start of the timer the output is off and turns on after the Off Delay elapses. The output remains on for the duration of the On Time. The cycle repeats until the user stops the timer either from the menu or a function key.
- **One-Shot Timer**  
At the start of the timer the output is off and turns on after the Off Delay elapses. The output remains on for the duration of the On Time. The timer stops and the cycle does not repeat.

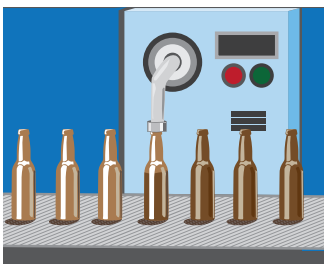

1. A sensor detects the bottle is in place and triggers the digital input to start the timer
2. The timer output controls the filling pump
3. The On Time is set according to the time needed to fill the bottle

## Loop-Powered Isolator for General Purpose & Hazardous Areas

The Loop Leader+ can be used as a loop-powered isolator for the 4-20 mA signal in both general purpose and hazardous areas with the added benefit of a digital readout to display the process variable.

## PUMP CONTROL

Loop Leader+ meters, when ordered with the two solid-state relays, have several features that make them ideal for simple duplex pump control. The relays can be programmed to alternate the pumps based on level and runtime thus ensuring even wear on both pumps. If the level remains constant (within on/off points), alternation is based on runtime. If the level cycles the on/off points, alternation is based on level and runtime. If the runtime is set to 0, alternation is based on level. The meter also keeps track of runtime for both pumps and the number of times they have cycled.

### Display Pump Runtime & Cycle Count



The meter can display pump runtime for both pumps



The meter can display the number of times the relays have cycled

In addition to the two solid-state relays for controlling pumps, the meter's two open collectors could be used to indicate high or low level alarm conditions.

## Pump Alternation Application

The Loop Leader+ can be used as a pump controller to alternate two pumps and provide high and low level alarm indication. The pumps can be programmed to alternate on level and runtime and the meter can display the pump runtimes and the number of times they have cycled. The PD4-6608-L5N can be used as an intrinsically safe pump controller.


**Pump Control with Alternation & Alarm Example**

The following is a typical application where the relays and open collectors are used for pump alternation and high/low level alarm.


Relay	On Point	Off Point	Function
1	7000	2000	Controls backup pump
2	6000	2000	Controls main pump

OC	On Point	Off Point	Function
1	7000	6500	Trips high alarm
2	1000	1500	Trips low alarm

1

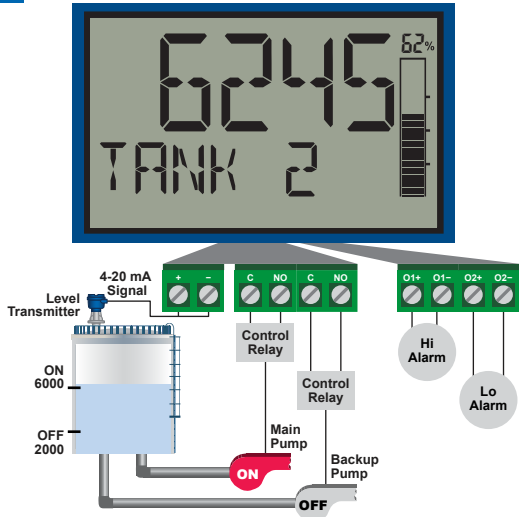


2

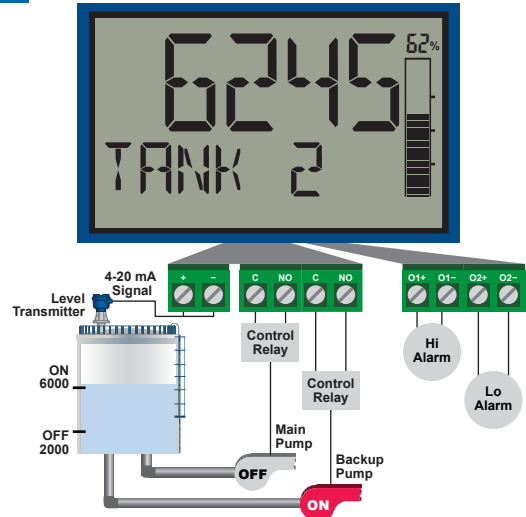

Relay #2 turns the main pump on at 6000 gallons and turns it off at 2000 gallons.


With the Pump Alternation feature activated, the next time the level reaches 6000 gallons, relay #1 transfers and starts the backup pump.

3

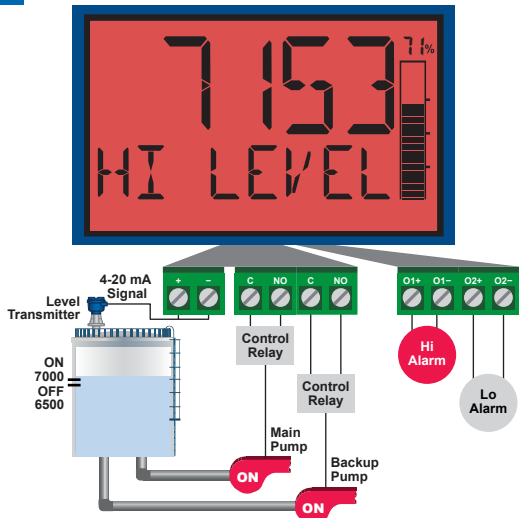

If the backup pump is not able to keep up, and the level reaches 7000 gallons, relay #2 transfers and starts the main pump as well. Open collector #1 trips the High Level Alarm, the display turns red and flashes "Hi Level" message. The High Level Alarm resets at 6500 gallons.

4

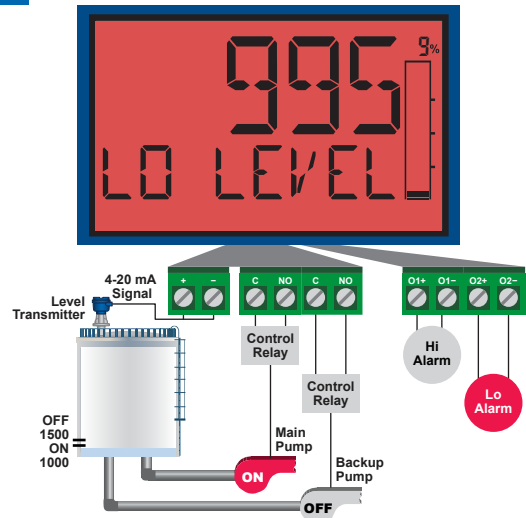

Once the level has dropped below the reset points, both relays will turn off. If the Main Pump fails to turn off, open collector #2 trips the Low Level Alarm at 1000 gallons to warn against the pump running dry. The Low Level Alarm resets at 1500 gallons.


## INPUT SIGNAL CONDITIONING

To satisfy applications that require scaling in ways other than the usual 2-point linear method, the Loop Leader+ can also be scaled for square root (DP flow), programmable exponent (open channel flow) or round horizontal tank volume calculation.

For existing processes that require these linearization capabilities, one of the great benefits of loop-powered meters is that they get their power directly from the 4-20 mA loop and thus require no additional wiring. All a user has to do is break the existing loop and wire in the meter. For this reason, loop-powered meters are very easy to add to existing applications such as DP flow, open channel flow, or round horizontal tank volume calculation.


### Round Horizontal Tank Linearization

This function automatically calculates the volume in a round horizontal tank with flat ends.

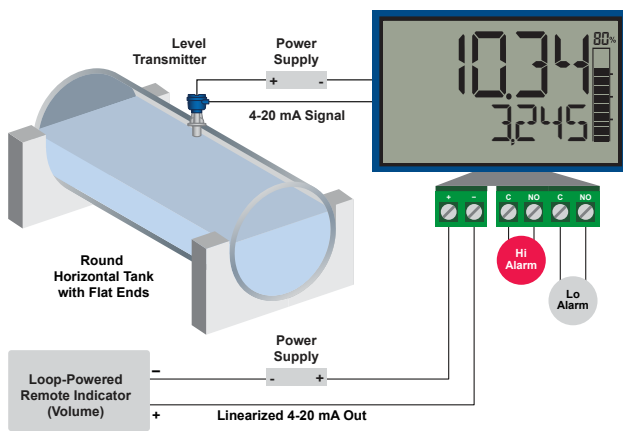


### Programmable Exponent Linearization

The programmable exponent can be used to linearize the signal from level transmitters in open-channel flow applications using weirs and flumes.

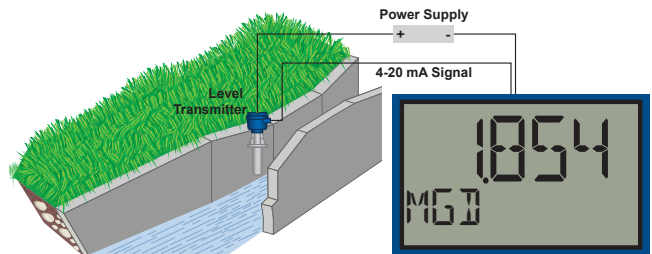

### Square Root Linearization


The square root function can be used to linearize the signal from a differential pressure transmitter and display flow rate in engineering units. The meters in this data sheet will display flow rate only. To display both flow rate and total use the PD4-6624 or PD4-6628.

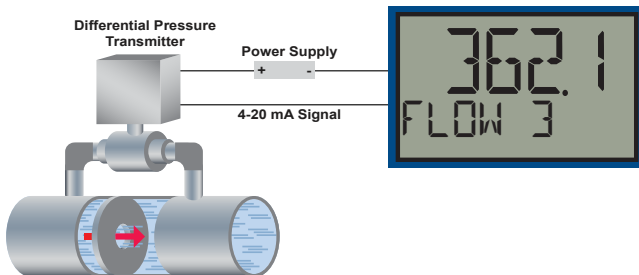

### Multi-Point Linearization

Meters are set up at the factory for linear function with 2-point linearization. Up to 32 linearization points can be selected for the scaled value under the linear function. Multi-point linearization can be used to linearize the input so the meter can display volume from non-linear tanks or to convert level to flow using weirs and flumes with complex equations.

MeterView XL makes it easy to program up to 32 points.

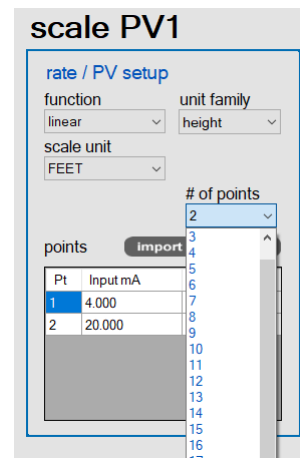

## PHYSICAL FEATURES

The Loop Leader+ is designed for ease-of-use in industrial applications where it will be exposed to wet, dusty, hot, cold and other adverse conditions. The Loop Leader+ is housed in a rugged NEMA 4X / IP65 enclosure, can operate over a wide temperature range, includes removable screw terminal connectors, and it carries electrical safety approvals. All of these features are backed by a 3-year warranty.

### Type 4X / NEMA 4X Front Cover

Not only does the Loop Leader+ Type 4X approval indicate it is waterproof, it also indicates it is rugged. Part of the Type 4X test is to drop a 2 inch, 1 lb, solid stainless steel ball from 4 feet on top of the meter's cover.




### Wide Operating Temperature Range

The Loop Leader+ can operate from -40 to 75°C. This means it can be installed in a wide variety of indoor and outdoor industrial applications. And over this range, the Loop Leader+ will drift no more than 0.003% of calibrated span/°C from -40 to 75°C ambient.


### Removable Screw Terminal Connectors

Industrial applications require screw terminal connections for easy field wiring and the Loop Leader+ goes one step further in convenience by making them removable also.

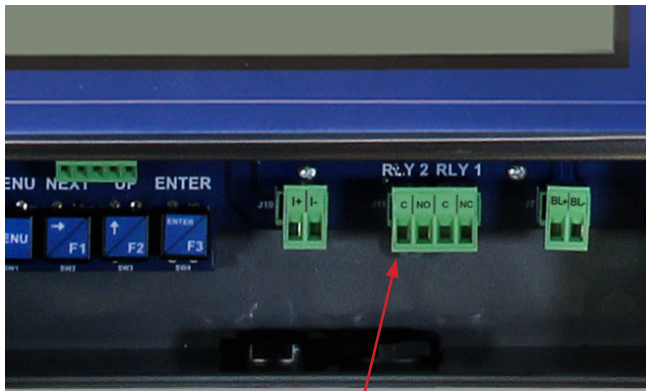

Easy Plug-in Removable Terminal Connectors


### USB Port for Easy Connection to Free MeterView XL Software

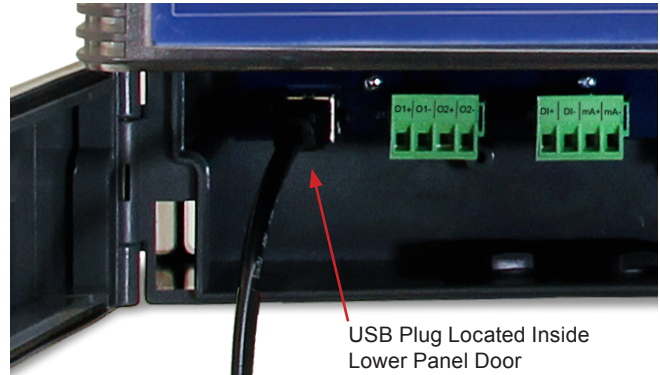

USB Plug Located Inside Lower Panel Door


### Integral Holes for Wall Mounting

The Loop Leader+ back panel includes four holes for convenient wall mounting.

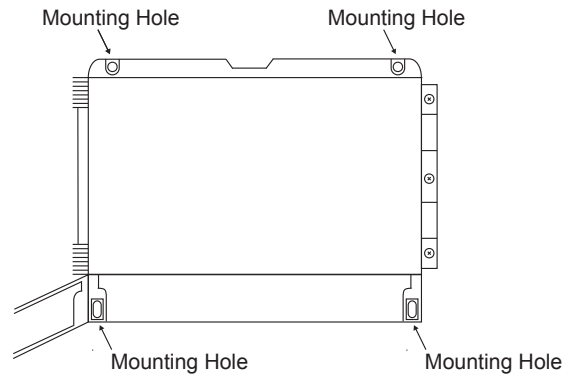

### Pipe Mounting Kit

The PD4 can also be mounted to a pipe using the optional pipe mounting kit (PDA6260). This kit includes two mounting plates, two U-bolts, and the necessary nuts and bolts.

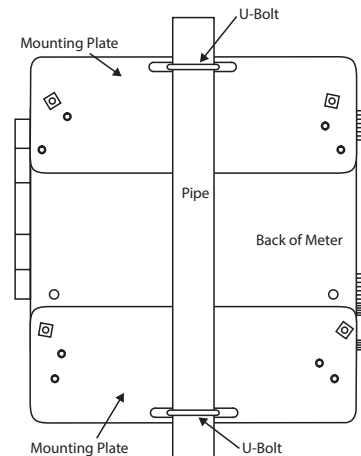




## OPERATIONAL FEATURES

Once the meter has been installed and the lower panel door secured, the user can still operate the meter by connecting a control station to the Remote Contacts on the connector board. The user can then operate the four buttons as they are set up by default or change them to provide a variety of different functions by using the programmable function keys.

### Programmable Function Keys


Three buttons labeled F1, F2, and F3 located inside the lower panel door can be programmed as function keys to perform a variety of meter functions simply by pressing the button. These include operation of the tare function, resetting the tare, resetting the meter's relays or open collectors, starting and stopping timers, and displaying max/min values. The default settings for the function keys are:

Button	Description (Default Settings)
NEXT 	Press to display max/min readings.
UP 	Press to reset max/min readings.
ENTER 	Press to acknowledge all manually resettable relays or open collectors. Press to lock/unlock the display value after pressing the F1 key.

For a complete list of Function Keys settings, see *Function Keys & Digital Input Available Settings* on the next page.

### On-Board Digital Input


A digital input is standard on the meter. This digital input is programmed identically to the function keys. The input is triggered with a contact closure between DI+ and DI-, or with an active low signal. For a complete list of Digital Input settings, see *Function Keys & Digital Input Available Settings* on the next page.

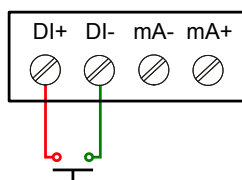

### Remote Operation of Meter

The meter can be operated remotely by connecting a [PDA2364-MRUE](#) control station to the Remote Contacts located behind the lower panel door of the meter.

**Note:** The control station does not carry hazardous area approvals and thus is not suitable for location in hazardous areas.

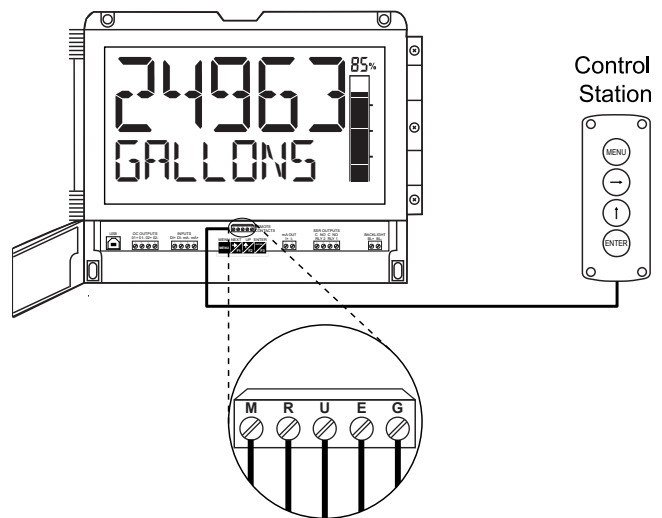

### Available Control Stations





### Function Keys & Digital Input Available Settings

The following table describes the actions that the Loop Leader+ function keys and digital input can perform.

Display	Description
DISP FN	Set the function key or digital input to display a value
DISPLAY	Cycle max, min, and PV(s)
DISP PV	Display the PV
PCT PV	Display the PV's percentage of max (20 mA)
UNITS	Display the PV's units
TAG	Display the PV's tag
DISPMIN	Display the PV's minimum
DISPMAX	Display the PV's maximum
MIN MAX	Display the PV's minimum and maximum value
mA IN	Display the mA input value
mAOUT	Display the mA output value
MENU FN	Set the function key or digital input to access a menu
RLYINFO	Go to relay information menu (INFO)
MANCTRL	Go to output control menu (CONTROL)
TIMR OC1	Open collector 1 timer
TIMR OC2	Open collector 2 timer
TIMER R1	Relay 1 timer
TIMER R2	Relay 2 timer
TIMERFN	Set the function key or digital input to start or stop a timer
STARTALL	Start all timers
STOPALL	Stop all timers
SSTPALL	Start or stop all timers
OC1	Start/stop open collector 1 timer
OC2	Start/stop open collector 2 timer
RLY1	Start/stop relay 1 timer
RLY2	Start/stop relay 2 timer
START	Start the selected timer output
STOP	Stop the selected timer output
STR--STP	Start or stop the selected timer output

Display	Description
ALARMFN	Set the function key or digital input to acknowledge an alarm
ACK	Acknowledge all active alarms
SETPOINT	Set all output set point
SETPTOC1	Set open collector 1 set point
SETPTOC2	Set open collector 2 set point
SETPTR1	Set relay 1 set point
SETPTR2	Set relay 2 set point
SWATCHFN	Set the function key or digital input to activate stopwatch
START	Start the stopwatch
STOP	Pause/Stop the stopwatch
STR--STP	Start or stop the stopwatch
TAREFN	Set the function key or digital input to tare the display value
TARE	Tare the display value
RST TARE	Reset the display value
HOLD FN	Set the function key or digital input to hold an output
HOLDOUT	Hold all outputs
HLDUNHLD	Hold or un-hold all outputs
OC 1+2	Hold/un-hold open collector outputs
RLY 1+2	Hold/un-hold relay outputs
mAOUT	Hold/un-hold 4-20 mA output
HOLD	Hold selected output
HLDUNHLD	Hold or un-hold selected output
DISABLE	Disable the function key or digital input
RST FN	Set the function key or digital input to reset a value
RESET	Reset min, max, or max/min PV value
R MINMAX	Reset max and min PV value

## METERVIEW XL PROGRAMMING SOFTWARE

Free, PC-based, MeterView XL software that connects to the meter via a micro USB cable is available for programming and setup of the meters. This software greatly simplifies the programming process and also allows the user to save configuration files for later use. The meter will also be powered by the USB connection so no additional power is needed during programming.

For more information visit  
[www.predig.com/meterviewxl](http://www.predig.com/meterviewxl)



### WARNING


- The meter should only be connected to a computer while it is located in a safe area.

### Main Screen

The main screen displays an image of the connected meter and includes various information about this meter, such as model number, readings, and status.

### Input/Scale

The Input/Scale window is used to set the input, scale the input, and enable/disable the dual-scale feature.

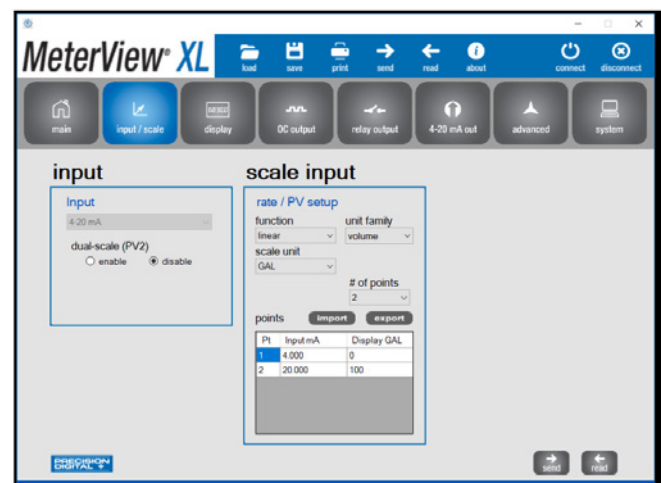


### IMPORTANT

- The image in the software shows the panel meter version. The same software is used for the PD4.


## Relay Output

The Relay Output window is used to assign a specific task to the 2 relays such as alarm, sample, timer, stopwatch, or off. A custom message that flashes every 10 seconds can also be added.

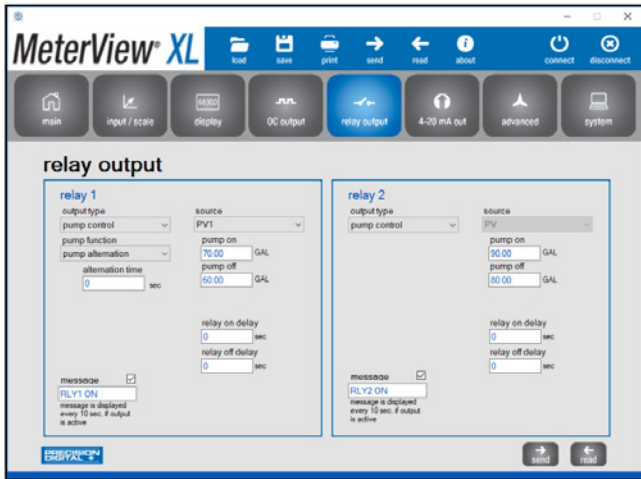

## 4-20 mA Output

The 4-20 mA Output window is used to program the isolated 4-20 mA output's source, range, and under and over range values.

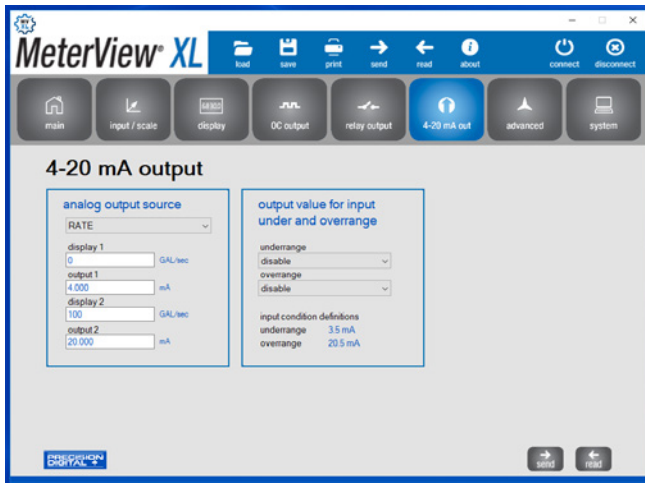

## Data Logging

MeterView XL software, when connected to the meter, can generate a log file such as the following example.

Date & Time	PV1	units	PV1 percent units
2/22/2021 12:31	0.017	FEET	0.43 %
2/22/2021 12:32	0.125	FEET	3.13 %
2/22/2021 12:32	0.231	FEET	5.78 %
2/22/2021 12:32	0.34	FEET	8.51 %
2/22/2021 12:32	0.446	FEET	11.15 %
2/22/2021 12:33	0.552	FEET	13.8 %
2/22/2021 12:33	0.659	FEET	16.47 %
2/22/2021 12:33	0.765	FEET	19.12 %
2/22/2021 12:33	0.871	FEET	21.78 %
2/22/2021 12:34	0.98	FEET	24.5 %
2/22/2021 12:34	1.086	FEET	27.14 %
2/22/2021 12:34	1.192	FEET	29.8 %
2/22/2021 12:35	1.299	FEET	32.48 %
2/22/2021 12:35	1.406	FEET	35.14 %
2/22/2021 12:35	1.51	FEET	37.76 %
2/22/2021 12:35	1.616	FEET	40.41 %
2/22/2021 12:36	1.726	FEET	43.15 %
2/22/2021 12:36	1.83	FEET	45.76 %
2/22/2021 12:36	1.937	FEET	48.42 %
2/22/2021 12:36	2.042	FEET	51.05 %
2/22/2021 12:37	2.148	FEET	53.71 %
2/22/2021 12:37	2.257	FEET	56.43 %
2/22/2021 12:37	2.364	FEET	59.1 %
2/22/2021 12:38	2.47	FEET	61.75 %
2/22/2021 12:38	2.579	FEET	64.48 %
2/22/2021 12:38	2.681	FEET	67.03 %
2/22/2021 12:38	2.788	FEET	69.71 %

## Configuration Files

A configuration file can be generated with or without a meter connected to the PC. This makes it possible to prepare meter configurations prior to having the meter in hand. Meter configurations can be saved and re-loaded into other meters. Meter configurations can also be printed.

## ACCESSORIES

### Plastic Control Stations

The PDA2360 series of plastic control stations provide a convenient way to remotely control devices. The Loop Leader+ Remote Contacts and/or digital input can be wired to any of the following control stations to perform a variety of tasks.

Model	Description
<a href="#">PDA2360-E</a>	Emergency Button
<a href="#">PDA2361-A</a>	Ack Button
<a href="#">PDA2361-B</a>	Blank Button
<a href="#">PDA2361-R</a>	Reset Button
<a href="#">PDA2361-T</a>	Tare Button
<a href="#">PDA2361-S</a>	Stop Button
<a href="#">PDA2361-Q</a>	Silence Button
<a href="#">PDA2362-AR</a>	Ack and Reset Buttons
<a href="#">PDA2362-BB</a>	Two Blank Buttons
<a href="#">PDA2364-MRUE</a>	Menu, Right, Up, Enter Buttons

**Notes:**

- Control stations can be connected directly to the meter's Remote Contacts or Digital Input terminals labeled DI+ and DI-.



PDA2364-MRUE



PDA2362-AR



PDA2362-BB



PDA2360-E



PDA2361-A



PDA2361-B



PDA2361-R



PDA2361-T



PDA2361-S



PDA2361-Q

### Signal Splitter & Conditioner Accessories



The PD659 series includes DIN rail mountable models for signal isolation, splitting and conditioning of 4-20 mA and 0-10 VDC signals.

Model	Description
<a href="#">PD659-1MA-1MA</a>	Signal Isolator with One 4-20 mA Input and One 4-20 mA Output
<a href="#">PD659-1MA-2MA</a>	Signal Splitter with One 4-20 mA Input and Two 4-20 mA Outputs
<a href="#">PD659-1V-1MA</a>	Signal Conditioner with One 0-10 VDC Input and One 4-20 mA Output
<a href="#">PD659-1MA-1V</a>	Signal Conditioner with One 4-20 mA Input and One 0-10 VDC Output

**WARNING**

- These accessories do not carry hazardous area approvals and are thus not suitable for location in hazardous areas. The use of additional protective devices may allow them to be installed in a safe area and connected to a device in a hazardous area. User should consult a professional engineer to determine suitability of these products for their specific application.

PD9501 Multi-Function Calibrator



This PD9501 Multi-Function Calibrator has a variety of signal measurement and output functions, including voltage, current, thermocouple, and RTD.

Model	Description
<a href="#">PD9501</a>	Multi-Function Calibrator

Pipe Mounting Kit



The meter can be mounted to a pipe using the PDA6260 pipe mounting kit, which includes two mounting plates, two U-bolts, and the necessary nuts and bolts.



Model	Description
<a href="#">PDA6260</a>	2" Pipe Mounting Kit for PD4

PD9502 Low-Cost Signal Generator



The PD9502 is a low-cost, compact, simple to use 4-20 mA or 0-10 VDC signal generator. It can easily be set for 0-20 mA, 4-20 mA, 0-10 V or 2-10 V ranges. Signal adjustment is made with a one-turn knob. A wall plug is provided with the instrument. Optional USB power bank is available.

Model	Description
<a href="#">PD9502</a>	Low-Cost Signal Generator
<a href="#">PDA1001</a>	USB Power Bank

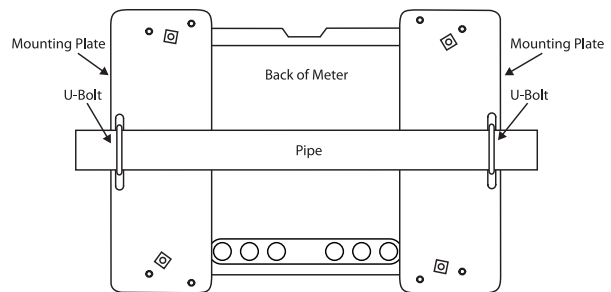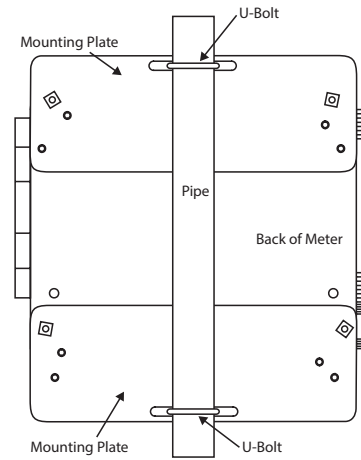

Vertical or Horizontal Pipe Mounting


**WARNING**

- These accessories do not carry hazardous area approvals and are thus not suitable for location in hazardous areas. The use of additional protective devices may allow them to be installed in a safe area and connected to a device in a hazardous area. User should consult a professional engineer to determine suitability of these products for their specific application.



**LIGHT / HORN & BUTTON ACCESSORY**

Loop Leader+ Meter with MOD-PD2LH Light / Horn and Button.  
 MOD-PD2LH Sold Separately.

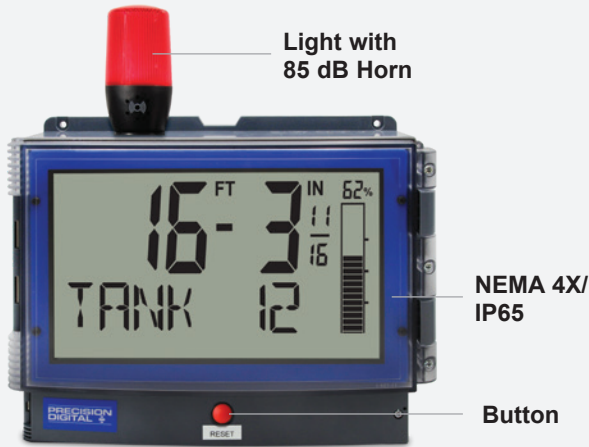

An external power supply must be used such as the PDA1024-01 to power up the Light / Horn.



Each Light / Horn accessory comes with 9 labels for the button.

**Overview**


The Loop Leader+ can be provided with an optional light(s) with built-in 85 dB horn that comes mounted and wired to the instrument by ordering a MOD-PD2LH Light / Horn as a separate item. Light / Horns can also be ordered as separate items to be mounted as the user desires by ordering a PDA-LH Light / Horn. An external 24 VDC power supply is required to power the Light / Horn. The MOD-PD2LH is available in three configurations. The first is a Light / Horn with a single color light (red, green, yellow, blue, or white). The second is a Light / Horn with a user selectable light color by connecting the appropriate wire. The third is a Light / Horn with red, yellow, and green layers users can turn on independently. The light and horn can be controlled independently of each other via separate relays on the meter. The meter's relays can be reset in a variety of ways, allowing several ways the Light / Horn can operate. For instance, the horn can be programmed to silence at any time via the Button or a function key on the front panel, and light to reset automatically when the alarm clears as the following table illustrates:

Relay #	Connected to	Default Reset Mode
1	Flashing Light <sup>(1)</sup>	Auto reset
2	Horn	Silence with Reset Button at any time

1. Light can be wired to flash or stay steady on.

**Dimensions**

Units: Inches (mm)

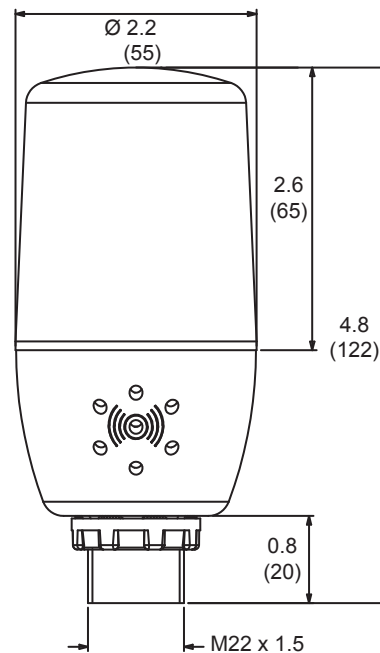

**WARNING**

- These accessories do not carry hazardous area approvals and are thus not suitable for location in hazardous areas. The use of additional protective devices may allow them to be installed in a safe area and connected to a device in a hazardous area. User should consult a professional engineer to determine suitability of these products for their specific application.

### 24 VDC Transmitter Power Supply

The [PDA1024-01](#) 24 VDC power supply can be used for a variety of functions like powering 4-20 mA transmitters, the PD4's backlight, and the light/horn accessory. It can be mounted on a [PDA1002](#) DIN rail.




### Specifications

<b>Input Voltage</b>	85-264 VAC; 120-370 VDC
<b>Output Voltage</b>	21.6-29 VDC; 1.5 A rated current.
<b>Input Frequency</b>	47-63 Hz
<b>AC Current</b>	115 VAC: 0.88 A; 230 VAC: 0.48 A
<b>Connections</b>	Screw terminals
<b>Overload Protection</b>	105-160% rated output power. Constant current limiting, recovers automatically after fault condition is removed
<b>Operating Temperature</b>	-30 to 60°C (-22 to 140°F)
<b>Vibration</b>	10-500 Hz, 2G 10 min./1 cycle, period for 60 min. each along X, Y, Z axes
<b>Safety Standards</b>	UL 508 Listed and UL Recognized Component
<b>Dimensions</b>	1.40" x 3.50" x 2.10" (35 mm x 90 mm x 54.5 mm) (W x H x D)
<b>Warranty</b>	1 year parts & labor

### Wiring Connections for MOD-PD2LH Models

The Light / Horn cannot be powered by the 4-20 mA loop. To use the Light / Horn an external power supply must be used such as the [PDA1024-01](#) as the following diagram illustrates.

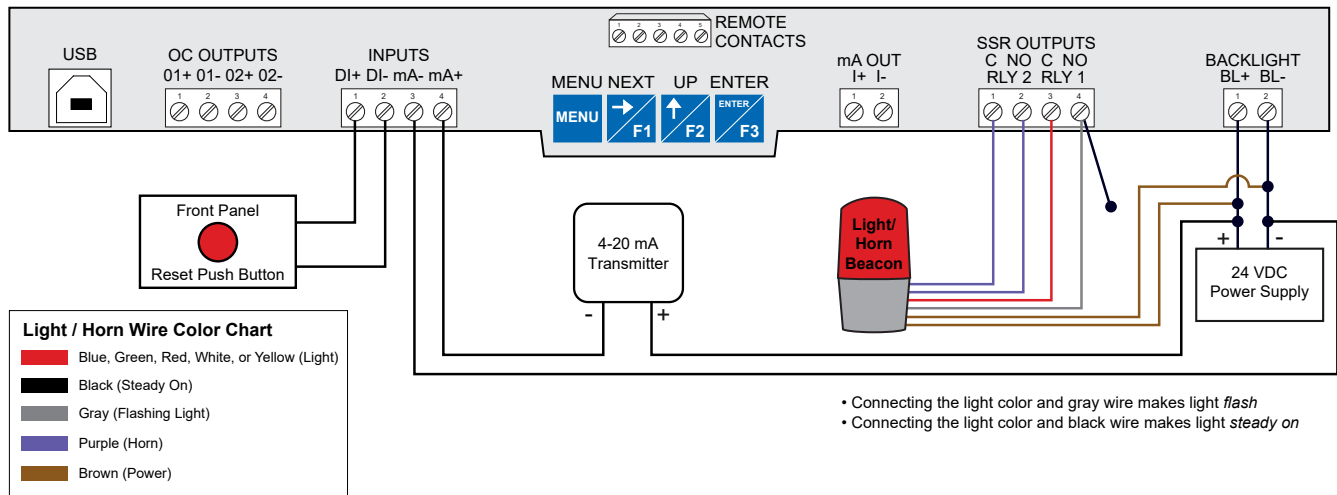

# Complete Product Line of Loop-Powered Meters

## WITH ALL THE SAME FEATURES & FUNCTIONALITY



2 Open Collector  
Outputs



 
2 Solid-State  
Relays



4-20 mA  
Output



Two-Color  
Backlight



Dual-Line  
Displays



Pump  
Control



Batch  
Control



Ex CE IECEx

### LARGE DISPLAY ❖

#### PD4 Loop Leader+ Series

- NEMA 4X, IP65 Rated Wall-Mount Enclosures
- Large 5-Digit, 2.5" High Top Display
- Safe Area and I.S. Models
- ATEX and IECEx Certified



SP Ex CE IECEx

### EXPLOSION-PROOF ❖

#### PD6900 ProtEX+ Series

- NEMA 4X, IP68 Rated Aluminum and Stainless Steel Enclosures
- CapTouch Through-Glass Buttons
- Explosion-Proof & I.S.
- CSA, ATEX, and IECEx Certified



UL LISTED Ex CE IECEx

### 1/8 DIN PANEL MOUNT ❖

#### PD6600 Loop Leader Series

- NEMA 4X, IP65 Rated Front 1/8 DIN Panel Mount Meters
- General Purpose and I.S. and N.I. Models
- UL, C-UL, and CE Approved

VantageView+ CE

### FIELD-MOUNT ❖

#### PD6900 VantageView+ Series

- NEMA 4X, IP66 Rated Plastic Enclosure
- CapTouch Through-Window Buttons
- General Purpose




MeterView XL Software Programs All These Products


Go to [PREDIG.COM](http://PREDIG.COM) for details

**DIMENSIONS**


**Front and Side View**

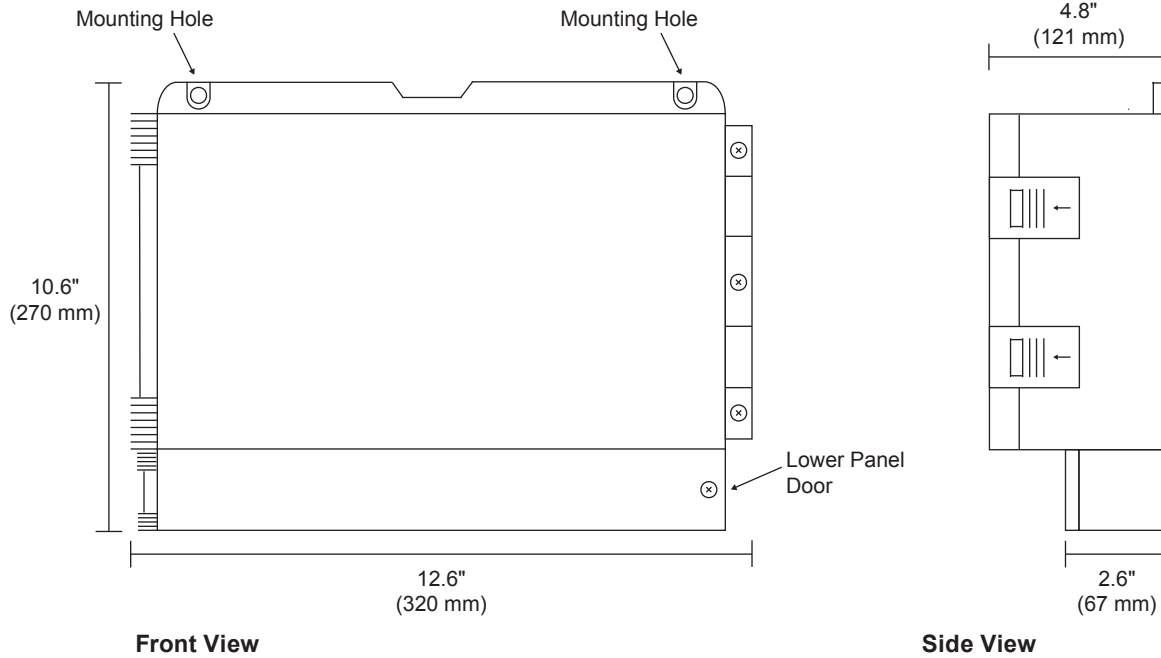

**Wall Mounting Holes Location**

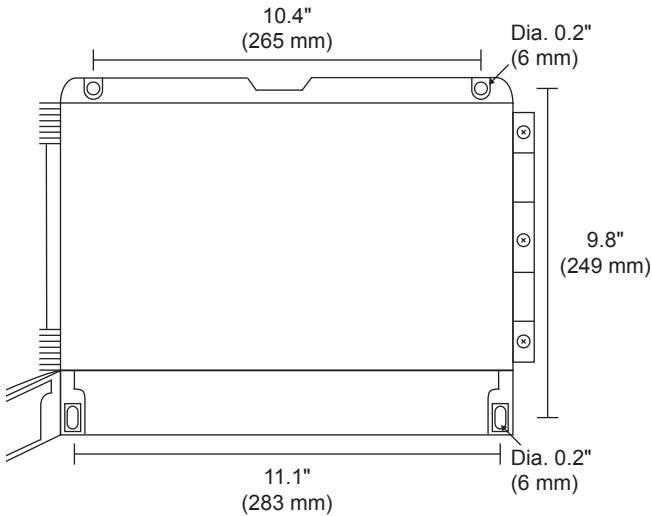

**Conduit Holes Location**

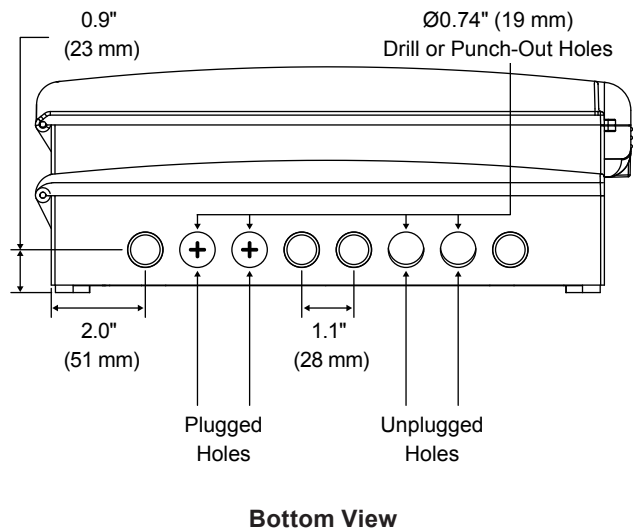


Download free 3-D CAD files of these instruments to simplify your drawings!


[predig.com/documentation-cad](http://predig.com/documentation-cad)

**CONNECTIONS**

**Connectors Labeling**

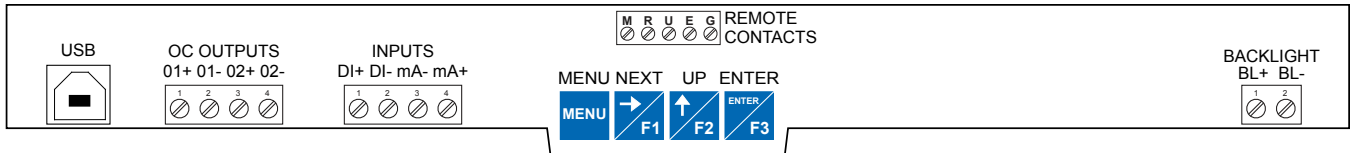


**-LNN Base Meter (2 Open Collectors Standard)**

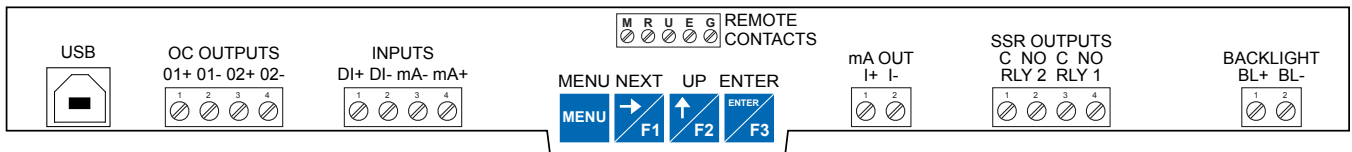

**-L5N Option (2 Solid-State Relays and 4-20 mA Output)**

**USB Connection Location**

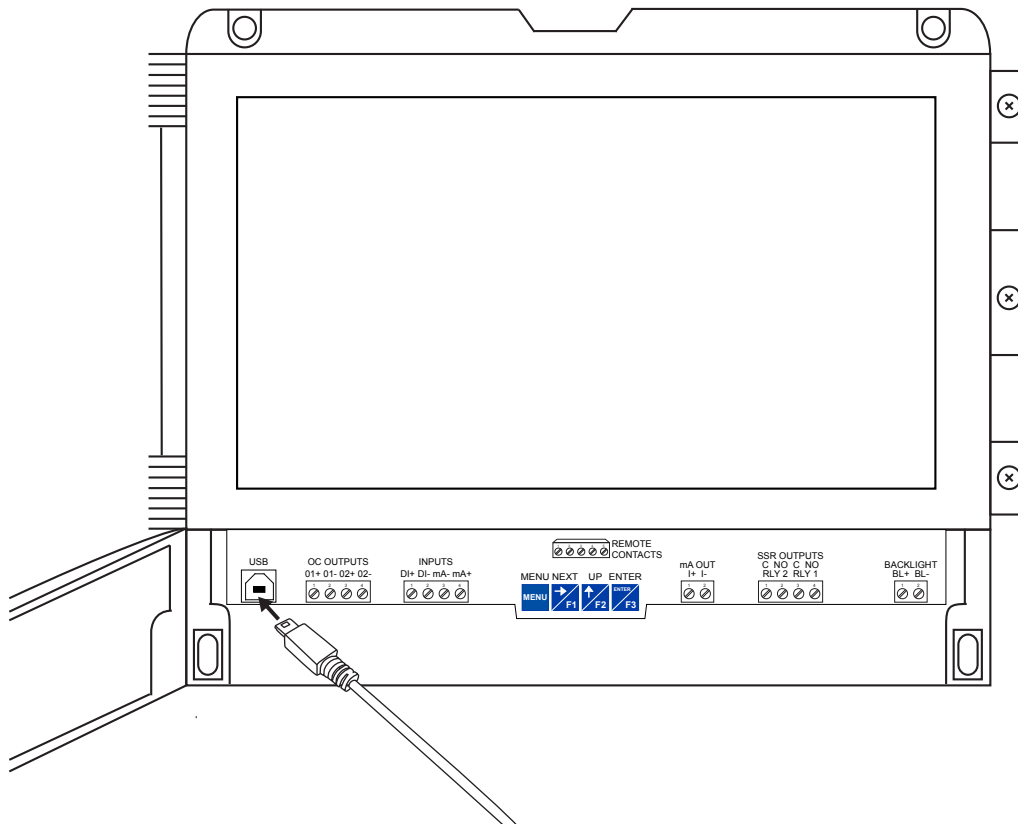

**USB cable plug is located inside the lower panel door**



## WIRING DIAGRAMS


For existing applications, one of the great benefits of loop-powered meters is that they get their power directly from the 4-20 mA loop and thus require no additional wiring. All a user has to do is break the existing loop and wire in the meter.

### WARNING


- See Control Drawing [LIM4-6600-2](#) for information on hazardous area wiring.

### Safe Area Input Loop (4-20 mA) Connections

The following figures show a 4-20 mA loop connected to the meter. The first figure shows the connection without the backlight and the second shows the connection with the backlight. The meter is powered by the 4-20 mA current loop.

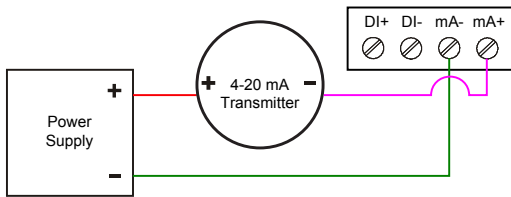


4-20 mA Input Connection without Backlight

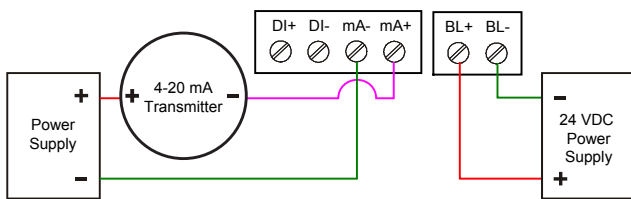

4-20 mA Input Connection with Backlight


### Safe Area Digital Input Connections

A digital input is standard on the meter. This digital input is connected with a normally open contact across DI+ and DI-, or with an active low signal applied to DI+ and DI-.

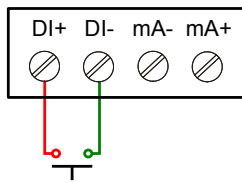


### Safe Area 4-20 mA Output Connections

Connections for the 4-20 mA transmitter output are made to the connector terminals labeled mA OUT. The 4-20 mA output must be powered from an external power supply.

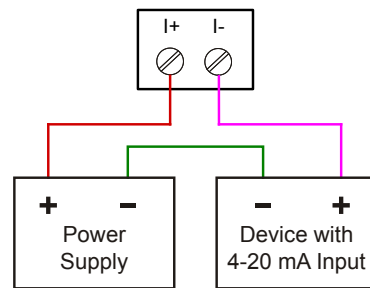


### Safe Area Solid-State Relay Connections

Relay connections are made to a four-terminal connector. Each relay's C terminal is common only to the normally open (NO) contact of the corresponding relay.

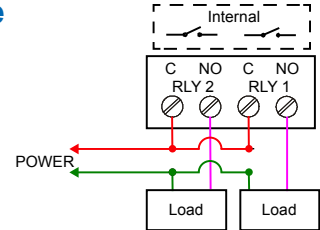

### Safe Area Open Collector Outputs

Open collector output 1 and 2 connections are made to terminals labeled O1+ and O1-, and O2+ and O2-. Connect the alarm or pulse input device as shown below.

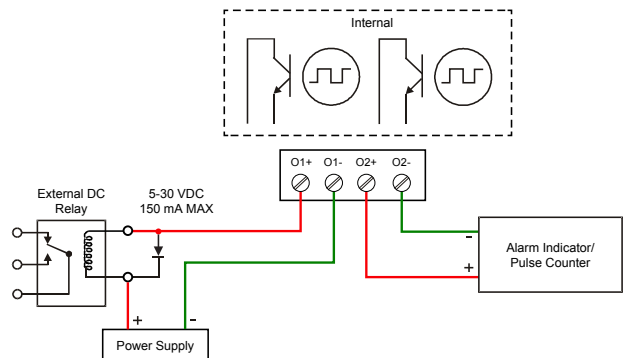

## SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

### Display

<b>PD4-6603/7</b>	Dual-line LCD with backlight. Top: 2.8" (71 mm), 5 digits 7-segment, FT-IN & fractions. Bottom: 1.5" (39 mm), 8 alphanumeric 14-segment characters. Display may be programmed to turn red and flash a user-defined message on alarm condition.
<b>PD4-6604/8</b>	Dual-line LCD with backlight. Both lines 14-segment alphanumeric. Top: 2.8" (71 mm) 5 digits Bottom: 1.5" (39 mm) 8 characters Display may be programmed to turn red and flash a user-defined message on alarm condition.
<b>Top Display</b>	PD4-6603: FT - IN/*: Automatically reducing fractions to lowest denominator *FT-IN/16, FT-IN/8, FT-IN/4, FT-IN/2, FT-IN-99FT 11IN 15/16 to 999FT 11IN 15/16  PD4-6604: 5 digits (-9999 to 99999) or 5 characters (all capital & most lower-case letters)
<b>Bottom Display</b>	8 digits (-9,999,999 to 99,999,999; separated by commas) or 8 characters (all capital & most lower-case letters)
<b>Backlight Power Requirement</b>	24 VDC @ 46 mA, typical
<b>Bargraph</b>	20 segments, numeric percent indication at top
<b>Decimal Point</b>	Up to four decimal places on top display and up to seven decimal places on bottom display
<b>Commas</b>	Commas to indicate 1000s (e.g. 88,987,628) on bottom display only
<b>Dual-Scale Feature</b>	The input can be displayed in different scales on the top and bottom displays. For instance, the top display could display the input in height and the bottom display could display that same input in volume.
<b>Alarm Indication</b>	Programmable: red backlight, flashing display, bargraph segment flashes on alarm. Backlight requires external 24 VDC.
<b>Custom Alarm Messages</b>	Programmable for each relay/open collector: 8 characters maximum; displayed every 10 sec for 1 sec on bottom display. May be turned off.
<b>Display Update Rate</b>	Ambient > -10°C: 1 Update/Second Ambient = -20°C: 1 Update/2 Seconds From -20°C to -40°C the update rate slows down 1 second for every -2°C (e.g. at -24°C, 1 update/4 seconds).
<b>Overrange</b>	PD4-6603: Top: 999 11 15/16 PD4-6604: Top: 99999 Bottom: 99,999,999 (flashing)
<b>Underrange</b>	PD4-6603: Top -99 11 15/16 PD4-6604: Top: -9999 Bottom: -9,999,999 (flashing)

### General

<b>Programming Method</b>	Buttons behind lower panel door & Free PC-based USB programming software
<b>Enclosure &amp; Materials</b>	Material: High impact Polycarbonate with UV stabilizer enclosure, UL 94V-0  Rating: NEMA 4X / IP65  Gasket: Polyurethane  Color: gray  Includes four PG11 through-hole conduit openings, with two factory installed PG11, IP68, black nylon threaded hole plugs with backing nuts.
<b>Environmental</b>	Operating temperature range: -40 to 75°C (-40 to 167°F)  Storage temperature range: -40 to 85°C (-40 to 185°F)  Relative humidity: 0 to 90% non-condensing; Printed circuit boards are conformally coated.
<b>Noise Filter</b>	Averages the input signal over a period of time between 1 and 16 seconds to dampen the effects of a noisy signal that causes a jumpy display.
<b>Filter Bypass</b>	0.0 to 99.9% of full scale. Input signal changes greater than bypass value are displayed immediately.
<b>Recalibration</b>	Recalibration is recommended at least every 12 months.
<b>Max/Min Display</b>	Max/min readings reached by the process are stored until reset by the user or until power to the meter is turned off.
<b>Tare</b>	Tare function zeros out the meter to accommodate for weight of a container. Tare function can be assigned to a function key or a digital input.
<b>Password</b>	Programmable password restricts modification of programmed settings.
<b>Non-Volatile Memory</b>	All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.
<b>Normal Mode Rejection</b>	64 dB at 50/60 Hz
<b>Connections</b>	Removable screw terminals accept 12 to 22 AWG wire. Remote contacts accept 16 to 30 AWG wire.
<b>Tightening Torque</b>	Screw terminal connectors: 4.5 lb-in (0.5 Nm) Mounting screws: 8.0 lb-in max. (0.9 Nm) Remote contacts: 2.5 lb-in (0.28 Nm)
<b>Overall Dimensions</b>	10.6" x 12.6" x 4.8" (270 mm x 320 mm x 121 mm) (H x W x D)
<b>Weight</b>	5.5 lbs (2.5 kg)
<b>Warranty</b>	3 years parts and labor. See Warranty Information and Terms & Conditions on <a href="http://www.predig.com">www.predig.com</a> for complete details.

## Input

<b>Input</b>	4-20 mA
<b>Accuracy</b>	±0.02% of span ±1 count PD4-6604/8: Square root and programmable exponent: 10-100% FS
<b>Voltage Drop</b>	2.1 V maximum
<b>Equivalent Resistance</b>	105 Ω @ 20 mA
<b>Input Overload</b>	Over current protection to 1 A maximum Over voltage protection to 30 VDC max (between mA+ and mA-/BL-)
<b>Temperature Drift</b>	25 PPM/°C from -40 to 75°C ambient
<b>Function</b>	PD4-6604/8: PV1: Linear (2-32 points), square root, or programmable exponent PV2: Linear (2-32 points) or Round Horizontal Tank  PD4-6603/7: PV1: Linear (2-32 points) PV2: Linear (2-32 points) or Round Horizontal Tank
<b>Low-Flow / Low-Height Cutoff</b>	Point below at which the display always shows zero. PD4-6604/8: 0.1 to 999,999 or disable. PD4-6603/7: 1/16 to 999FT 11IN 15/16 or disable.
<b>HART Transparency</b>	The meter does not interfere with existing HART communications; it displays the 4-20 mA primary variable and it allows the HART communications to pass through without interruption. The meter is not affected if a HART communicator is connected to the loop. The meter does not display secondary HART variables.

## Common Open Collector & Relay Specifications

<b>Number</b>	Two open collectors & two relays
<b>High or Low Alarm</b>	User programmable for high or low alarm
<b>Alarm Deadband</b>	0-100% FS, user programmable
<b>Output Assignment</b>	Alarm, Timer, Stopwatch, or Disable
<b>Alarm Output Source</b>	Assign to PV (PV1, PV2) or Digital Input
<b>On &amp; Off Time Delay</b>	0 to 9,999 seconds
<b>Fail-Safe Operation</b>	Independent for each open collector and relay. Fail-safe on, the output is on under normal conditions. Fail-safe off, the output is on under alarm conditions.
<b>Alarm Operation</b>	Automatic, automatic with manual override, latching (manual reset anytime), latching with reset after cleared (manual reset only after alarm has cleared)
<b>Alarm Indication</b>	Programmable: red backlight, flashing display, Bargraph segment flashes on alarm. Backlight requires external 24 VDC.
<b>Custom Alarm Messages</b>	Programmable for each relay/open collector: 8 characters maximum; displayed every 10 sec for 1 sec on bottom display. May be turned off.
<b>Alarm Acknowledge</b>	Front panel ACK button or external digital input resets output and screen indication.
<b>Auto Initialization</b>	When power is applied to the meter, open collectors and relays will reflect the state of the input to the meter.
<b>Timer Output</b>	One-shot or Continuous Off Time Delay: 1 sec to 99:59:59 (hrs:min:sec) On Time: 1 sec to 99:59:59 (hrs:min:sec)
<b>Stopwatch</b>	Output turns on when started and off when stopped.

## Open Collector Outputs

<b>Rating</b>	Isolated open collector, sinking NPN 5-30 VDC @ 150 mA maximum
<b>Output Assignment</b>	Pulse, Alarm, Timer, Stopwatch on/off, or Disable
<b>Pulse Output Source</b>	PV (PV1, PV2) or Test Frequency
<b>Pulse Output Factor</b>	0.000001 to 999,999.9
<b>Pulse Width</b>	0.5 ms @ 1 kHz; 500 ms @ 1 Hz; 50% duty cycle
<b>Pulse Output Frequency</b>	1,000 Hz maximum
<b>Quadrature Pulse Output</b>	Available for Output 2 (90° behind Output 1) 500 Hz maximum
<b>Alarm Output Source</b>	Assign to PV (PV1, PV2) or Digital Input

## Solid-State Relays

<b>Rating</b>	250 VAC/VDC @ 1 A resistive 75 VA; 250VAC; 0.6 A pilot duty (inductive) 25 VA; 250VDC; 0.6 A pilot duty (inductive)
<b>Noise Suppression</b>	Metal oxide varistors across outputs
<b>Relay Assignment</b>	Pump Alternation, Alarm, Timer, Stopwatch on/off, or Disable
<b>Alarm Output Source</b>	Assign to PV (PV1, PV2) or Digital Input
<b>Pump Alternation</b>	Relays may be programmed to alternate with each pump cycle with an elapsed time override where the pumps will alternate regardless of level. Pump alternation time can be programmed for 0 to 999:59 (hrs:min)
<b>Relay (Pump) Runtime</b>	Meter will keep track of how long each relay (pump) has operated and display this information
<b>Relay (Pump) Cycles</b>	Meter will keep track of how many times the relays (pumps) have cycled and display this information

## 4-20 mA Transmitter Output (Passive)

<b>Accuracy</b>	±0.05% FS ±0.001mA
<b>Output Source</b>	PV1, PV2, re-transmit; reverse scaling allowed
<b>Scaling Range</b>	1.00 to 23.0 mA
<b>Disable</b>	High impedance state, less than 1 mA
<b>Calibration</b>	Factory calibrated 4.00 to 20.00 mA
<b>Underrange</b>	1.0 mA, 3.5 mA, or 3.8 mA (If input < 3.5 mA); or Off; user selectable
<b>Overrange</b>	20.5 mA, 20.8 mA, or 23.0 mA (If input > 20.5 mA); or Off; user selectable
<b>Isolation</b>	500 V input-to-output
<b>Temperature Drift</b>	0.5 µA/°C max from -40 to 75°C ambient
<b>External Loop Power Supply</b>	7.0 VDC to 30.0 VDC maximum
<b>Output Loop Resistance</b>	10-750 Ω @ 24 VDC; 10-1100 Ω @ 30 VDC

## On-Board Digital Input

<b>Function</b>	Remote operation of front-panel buttons, acknowledge/reset relays, reset max/min values, etc.
<b>Contacts</b>	2.1 VDC on contact. Connect normally open contacts across DI+ and DI-
<b>Logic Levels</b>	Logic High: 2.4 to 30 VDC (max) Logic Low: 0 to 0.9 VDC

## Remote Contacts

<b>Function</b>	Terminals provided for remote operation of all four programming / operation buttons (use <a href="#">PDA2364-MRUE</a> control station).
<b>Remote Buttons</b>	Menu, Right, Up, Enter
<b>Remote Function Keys</b>	F1 / Reset* F2 / Max* F3 / Ack*  *Defaults

### WARNING

- **DO NOT** connect anything else, other than normally open switch contacts, to the Remote Contacts terminals.

## MeterView XL

<b>Availability</b>	Free download from <a href="http://www.predig.com">www.predig.com</a>
<b>System Requirements</b>	Microsoft® Windows® 7 & 10
<b>Communications</b>	USB 2.0 (Standard USB A to Micro USB B) Cable provided
<b>Configuration</b>	Configure all parameters on the meter. Configure meters one at a time.
<b>Configuration Files</b>	Generate with or without meter connected; Save to file for later use.
<b>USB Power Connection</b>	Meter is powered by USB connection during programming, if 4-20 mA loop is not connected.

### WARNING

- The meter should only be connected to a computer while it is located in a safe area.

<b>Compatibility</b>	Programs created for Loop Leader and Loop Leader+ may be run on either meter. Programs created for VantageView+ and ProtEX+ can be run on either meter. No other program sharing is permissible.
----------------------	--

## General Compliance Information

### Electromagnetic Compatibility

<b>EMC Emissions</b>	<ul style="list-style-type: none"> <li>CFR 47 FCC Part 15 Subpart B Class A emissions requirements (USA)</li> <li>AS/NZS CISPR 11 Class A ISM emissions requirements (Australia)</li> <li>EN 55011 Group 1 Class A ISM emissions requirements (EU)</li> <li>ICES-001 Issue 4 ISM emissions requirements (Canada)</li> </ul>
----------------------	---

<b>EMC Emissions and Immunity</b>	EN 61326-1 EMC requirements for Electrical equipment for measurement, control, and laboratory use – industrial use
-----------------------------------	---

### Compliance Information (Select Models)

#### Hazardous Area Approvals

<b>ATEX</b>	Ⓜ II 1 G D Ex ia IIC T4 Ga EX ia IIIC T200°C Da -40°C ≤ Ta ≤ 75°C Certificate number: CML 18ATEX2091X
<b>IECEX</b>	Ex ia IIC T4 Ga EX ia IIIC T200°C Da -40°C ≤ Ta ≤ 75°C Certificate number: IECEX CML 18.0051X

## ORDERING INFORMATION

### General Purpose Instruments

PD4-6603 Feet & Inches with Bargraph Models	
Model	Description
PD4-6603-LNN	Large Display, Loop-Powered, General Purpose, Feet & Inches, No Options
PD4-6603-L5N	Large Display, Loop-Powered, General Purpose, Feet & Inches, Two Solid-State Relays and 4-20 mA Analog Output

PD4-6604 Decimal with Bargraph Models	
Model	Description
PD4-6604-LNN	Large Display, Loop-Powered, General Purpose, No Options
PD4-6604-L5N	Large Display, Loop-Powered, General Purpose, Two Solid-State Relays and 4-20 mA Analog Output

### Hazardous Area Instruments

PD4-6607 Feet & Inches with Bargraph Models	
Model	Description
PD4-6607-LNN	Large Display, Loop-Powered, Hazardous Area, Feet & Inches, No Options
PD4-6607-L5N	Large Display, Loop-Powered, Hazardous Area, Feet & Inches, Two Solid-State Relays and 4-20 mA Analog Output

PD4-6608 Decimal with Bargraph Models	
Model	Description
PD4-6608-LNN	Large Display, Loop-Powered, Hazardous Area, No Options
PD4-6608-L5N	Large Display, Loop-Powered, Hazardous Area, Two Solid-State Relays and 4-20 mA Analog Output

#### Notes:

- All models come standard with two open collector outputs and contacts for remote operation.
- Electrical safety and hazardous area approvals for hazardous area instruments only.



## Accessories

General Accessories	
Model	Description
<a href="#">PD659-1MA-1MA</a>	Signal Isolator with One 4-20 mA Input and One 4-20 mA Output
<a href="#">PD659-1MA-2MA</a>	Signal Splitter with One 4-20 mA Input and Two 4-20 mA Outputs
<a href="#">PD659-1V-1MA</a>	Signal Conditioner with One 0-10 VDC Input and One 4-20 mA Output
<a href="#">PD659-1MA-1V</a>	Signal Conditioner with One 4-20 mA Input and One 0-10 VDC Output
<a href="#">PD9501</a>	Multi-Function Calibrator
<a href="#">PD9502</a>	Low-Cost Signal Generator
<a href="#">PDA1002</a>	6" DIN Rail Mounting Kit
<a href="#">PDA1024-01</a>	24 VDC Power Supply for DIN Rail
<a href="#">PDA6260</a>	2" Pipe Mounting Kit for PD4

PDA2360 Series Control Stations	
Model	Description
<a href="#">PDA2360-E</a>	Emergency Button
<a href="#">PDA2361-A</a>	Ack Button
<a href="#">PDA2361-B</a>	Blank Button
<a href="#">PDA2361-R</a>	Reset Button
<a href="#">PDA2361-T</a>	Tare Button
<a href="#">PDA2361-S</a>	Stop Button
<a href="#">PDA2361-Q</a>	Silence Button
<a href="#">PDA2362-AR</a>	Ack and Reset Buttons
<a href="#">PDA2362-BB</a>	Two Blank Buttons
<a href="#">PDA2364-MRUE</a>	Menu, Right, Up, Enter Buttons

PDA-LH Light/Horn	
Model	Description
<a href="#">PDA-LHR</a>	Red Light / Horn
<a href="#">PDA-LHG</a>	Green Light / Horn
<a href="#">PDA-LHY</a>	Yellow Light / Horn
<a href="#">PDA-LHB</a>	Blue Light / Horn
<a href="#">PDA-LHW</a>	White Light / Horn
<a href="#">PDA-LH5C</a>	Light / Horn with User Choice of Red, Green, Yellow, Blue or White Light
<a href="#">PDA-LH3LC-RYG</a>	Light / Horn with Red, Yellow, Green Light Layers

PDA-BUTTON Momentary Pushbutton	
Model	Description
<a href="#">PDA-BUTTON1R</a>	NEMA 4X Red Pushbutton
<a href="#">PDA-BUTTON1G</a>	NEMA 4X Green Pushbutton
<a href="#">PDA-BUTTON1B</a>	NEMA 4X Black Pushbutton

MOD-PD2LH Light/Horn & Button	
Model	Description
<a href="#">MOD-PD2LHRB1</a>	Red Light / Horn / 1 Reset Button Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LHGB1</a>	Green Light / Horn / 1 Reset Button Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LHYB1</a>	Yellow Light / Horn / 1 Reset Button Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LHBB1</a>	Blue Light / Horn / 1 Reset Button Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LHWB1</a>	White Light / Horn / 1 Reset Button Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LH5CB1</a>	Light / Horn with User Choice of Red, Green, Yellow, Blue or White Light, Reset Button, Mounted and Wired to Loop Leader+
<a href="#">MOD-PD2LH3CB1-RYG</a>	Light / Horn with Red, Yellow, Green Light Layers, Reset Button, Mounted and Wired to Loop Leader+

**Notes**

- Specify MOD-PD2LH model as a separate item on the order for the Loop Leader+ to order the Light / Horn accessory installed and wired. Meter is sold separately.

## Your Local Distributor is:



46, Jalan SS 22/21, Damansara Jaya,  
47400 Petaling Jaya,  
Selangor Darul Ehsan, Malaysia.

Email: [nog@nog.com.my](mailto:nog@nog.com.my)  
Website: [www.nog.com.my](http://www.nog.com.my)

## Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.

©2022 Precision Digital Corporation. All rights reserved.



**WARNING**  
Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

LDS4-6604\_A 12/22